

# RINATO SPA™

## OWNER'S MANUAL



**EUROPEAN TOUCH**  
*The World's Finest Pedicure Spas*

## EUROPEAN TOUCH - LIMITED WARRANTY

EUROPEAN TOUCH manufactures the Rinato® Whirlpool Pedicure Spa with the highest standards for quality materials and workmanship. EUROPEAN TOUCH expressly warrants its products as follows:

To the original owner (herein called "owner") of the Rinato Whirlpool Pedicure Spa (herein called "pedicure spa"): EUROPEAN TOUCH may repair or replace, at its option, any pedicure spa found to be defective in material or workmanship upon inspection by an authorized representative of EUROPEAN TOUCH. This limited warranty covers the following components for the following time periods:

- All components: 12 months from date of shipment from manufacturer's facility.

The exchange of a pedicure spa is limited to supplying a replacement pedicure spa of comparable style and size. EUROPEAN TOUCH may, at its own discretion, use refurbished parts or pedicure spas for replacement purposes. The owner must pay all labor and shipping charges necessary to repair or replace the product. **NO CONSEQUENTIAL, INCIDENTAL, CONTINGENT, COMPENSATORY, INDIRECT, SPECIAL, OR OTHER DAMAGES WILL BE ALLOWED.** This limited warranty is null and void if the pedicure spa is removed from its place of initial installation, or is not installed in accordance with the specifications of European Touch or federal, state or local codes and ordinances. Furthermore, this warranty does not apply if the pedicure spa has been subject to misapplication, improper installation or maintenance, negligence, improper cleaning or other circumstances beyond EUROPEAN TOUCH's control.

### NOT COVERED:

1. Damage to pump parts and/or motor parts due to obstruction in plumbing lines, etc.
2. Staining, fading or discoloration of plastic surfaces due to exposure and/or the use of harmful cleaning agents or chemicals.
3. Staining, fading or discoloration caused by improper or poor water additives not related to maintenance of proper water are not covered by this warranty.
4. Malfunctions or damage caused by improper installation; including, but not limited to, failure to meet local and state plumbing, electrical, and building codes.
5. Staining, fading or discoloration of the vinyl seat, armrests, or footrests.
6. Damage resulting from standing in the basin.
7. Freight damage, misuse, modification, neglect, accident, natural disaster, and abuse.
8. Unauthorized repairs.
9. Damage while in possession of any party other than European Touch.

Should service be required due to a defect or malfunction during the warranty period, please contact:

EUROPEAN TOUCH  
Technical Support  
Toll-Free: 800-626-6912  
Phone: 414-357-7016  
Fax: 414-357-6360  
[service@europeantouch.com](mailto:service@europeantouch.com)  
<http://www.europeantouch.com>

The owner agrees by using this pedicure spa (a) that the obligation of EUROPEAN TOUCH shall not extend to indirect or contingent damages, or injury, which may result from such use and (b) that the obligations of EUROPEAN TOUCH are limited to those set forth herein. This limited warranty is the exclusive remedy and is in lieu of all other warranties, express or limited, including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose. No dealer or other person has any authority to bind EUROPEAN TOUCH to changes or additions to this warranty or its products. Accordingly, EUROPEAN TOUCH is not responsible for any such warranties or representations.

### OTHER PROVISIONS:

- This warranty is limited to the original owner/end-user and is not transferable.
- European Touch shall not be liable for any other obligations or liabilities, including, but not limited to, obligations or liabilities arising out of breach of contract or warranty, negligence, or other tort or any theory of strict liability with respect to the pedicure spa or the acts or omissions of European Touch.
- Any assistance European Touch provides to the original owner outside the terms, limitations or exclusions of this limited warranty will not constitute a waiver of search terms, limitations or exclusions, nor will such assistance extend or revive the warranty.



# Certificate of Compliance

For

## European Touch

8301 W. Parkland Court  
Milwaukee, WI  
U.S.A. 53223

For Compliance of:

**Equipment: Whirlpool Pedicure Spa**  
**Rated: 220-240VAC, 50Hz, 7.5A**

To the following standard(s):

- UL 60335-1:2002
- UL 1647:2001
- CAN/CSA E60335-2-32:2001
- CAN/CSA E60335-1:1994
- EN 55014-2 (Generic): 2003
- EN 61000-4-2 (Criteria C): 2001
- EN 61000-4-3:2002
- EN 61000-4-4: 1995
- EN 61000-4-5: 2001
- EN 61000-4-6: 2001
- EN 61000-4-11: 2004

Technical Report No: NI802326  
Issue Date: April 11, 2008  
Expiry Date: January 25, 2009

Kavinder Dhillon



Refer to project file for complete information on Certificate



EUROPEAN TOUCH™  
**OWNERS MANUAL For**  
**Rinato® Spa**

**IMPORTANT INFORMATION**


Serial Number: \_\_\_\_\_

Work Order Number: \_\_\_\_\_

Installed by: \_\_\_\_\_

Installation Date: \_\_\_\_\_

The serial number and work order number are located under the seat bottom cushion on the seat track plate.

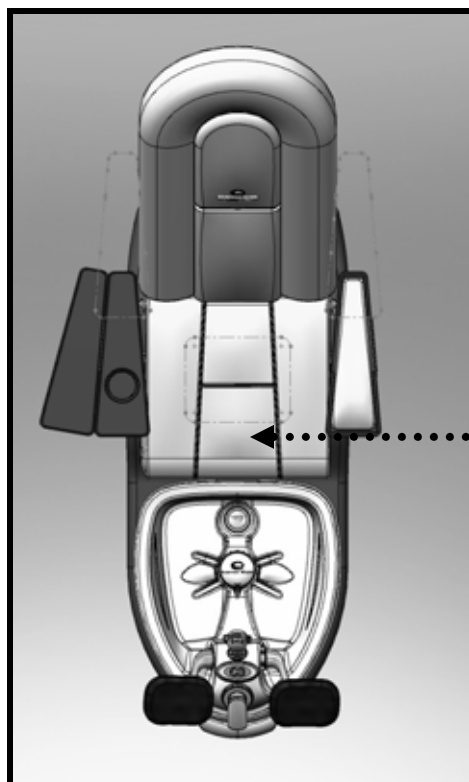

Remove seat cushion to locate the serial number and work order number on seat frame.



# EUROPEAN TOUCH™

## TABLE OF CONTENTS

<b>EUROPEAN TOUCH - LIMITED WARRANTY .....</b>	<b>2</b>
<b>CERTIFICATE OF COMPLIANCE.....</b>	<b>3</b>
<b>IMPORTANT INFORMATION.....</b>	<b>4</b>
<b>INTRODUCTION.....</b>	<b>6</b>
<b>IMPORTANT SAFETY INSTRUCTIONS .....</b>	<b>6</b>
<b>DANGER .....</b>	<b>7</b>
<b>WARNINGS .....</b>	<b>7</b>
<b>IMPORTANT REQUIREMENTS.....</b>	<b>8</b>
<b>HEALTH RISK WARNING .....</b>	<b>8</b>
<b>PEDICURE SPA SPECIFICATIONS.....</b>	<b>9</b>
<b>REMOTE CONTROL CONFIGURATIONS.....</b>	<b>10</b>
<b>WIRED SOUND OPTION .....</b>	<b>11</b>
<b>COMPONENT REFERENCE .....</b>	<b>12</b>
<b>PEDICURE PRODUCT GUIDELINES.....</b>	<b>12</b>
<b>CLEAN TOUCH™ PIPE-FREE SPA CLEANING AND DISINFECTING PROCEDURES .....</b>	<b>13</b>
<b>HISTORY AND NOTES.....</b>	<b>14</b>



EUROPEAN TOUCH™

## INTRODUCTION

Thank you for selecting EUROPEAN TOUCH, the leading designer, manufacturer, and marketer of pedicure spas in North America. The Rinato Spa™ (herein referred to as pedicure spa) is an innovative whirlpool pedicure spa that has been designed to serve you dependably for many years. Please take time to thoroughly read this entire manual before installation and use. If you have any problems or have questions regarding your pedicure spa, please contact EUROPEAN TOUCH's Technical Support Department at **1-800-626-6912**, Monday through Friday 8 AM to 5 PM CST. After hours calls are recorded and attended to the next business day.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using the Pedicure Spa.

**WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) Use the Pedicure Spa only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 2) Never operate the Pedicure Spa if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- 3) Never drop or insert any object into any opening.
- 4) Do not use outdoors.
- 5) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

**Save These Instructions**



## EUROPEAN TOUCH™

### DANGER

- 1) Never use pins or other metallic fasteners with this appliance.
- 2) Carefully examine the covering before each use.
- 3) Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- 4) Keep Dry – Do not operate in a wet or moist condition.

### WARNINGS

- 1) Temperatures sufficiently high to cause burns may occur regardless of the control setting.
  - a. Do not use on...
    - Infants
    - Invalids
    - Sleeping or unconscious person.
  - b. Do not use on...
    - Insensitive skin
    - Person with poor blood circulation.

*Note: Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.*

- 2) Excessive water temperature is dangerous and should be checked before use. Maximum operating water temperature should not exceed 105° F (41° C) and the maximum supply water temperature should not exceed 150° F (65° C).
- 3) The spa has a heated surface in the seat bottom. Persons sensitive to heat must be careful when using the spa.
- 4) Always enter and exit the pedicure spa slowly and carefully.
- 5) Never bring or operate any electrical devices into or near the pedicure spa.
- 6) This pedicure spa has a weight capacity of 350 pounds.
- 7) Do Not Crush – Avoid sharp folds
- 8) Do not stand on or in appliance.
- 9) Use only while seated.
- 10) Keep children away from extended foot support
- 11) Connect this appliance to a properly grounded outlet only. See Grounding Instructions within the install manual.

*Note: Always verify maximum temperatures with your local & state codes.*



EUROPEAN TOUCH™

## IMPORTANT REQUIREMENTS

EUROPEAN TOUCH requires that you contact your local, licensed plumber and licensed electrician to install your new pedicure spa. Installation must be in compliance with all your local and state building codes. Your pedicure spa cannot operate efficiently or safely unless it is provided with adequate electrical power, sufficient water pressure, proper water temperature, and required drainage capabilities. Contact your local building inspector for information and local code compliance procedures that need to be followed when having your pedicure spa installed. Subsequent inspections and approvals that may be required are the responsibility of the purchaser. **(See limited warranty regarding incidental or consequential exclusions – page 2).**

## HEALTH RISK WARNING

Individuals whose feet or legs are inflamed or have open wounds should not be allowed to use the pedicure spa at any time. Nail technicians should advise clients to consult their physician before using the pedicure spa if there is any sign of fungal infection, swelling, fracture, or persistent pain. In some cases diabetics may experience improved circulation in their feet, but should first consult their physician prior to receiving a pedicure.

**If the client experiences any pain or discomfort discontinue the use of the pedicure spa immediately.**

*Your client's massage and pedicure spa experience should be pleasant and comfortable.*



# PEDICURE SPA SPECIFICATIONS

**Hot and cold water supply lines required** (hot and cold shut offs may be installed under pedicure spa base)

## SHIPPING INFORMATION

**Seat collapsed, armrests closed (spa shipping position):** 59"L (150cm) x 33"W (84cm) x 34"H (86cm)  
**Dimensions:** 65"L (165cm) x 36"W (84cm) x 41"H (104cm) – includes Spa, carton, and pallet  
65"L (165cm) x 36"W (84cm) x 53"H (135cm) – includes Spa, carton, pallet, and accessories  
**Weight:** 257 lbs. (117 kg) - includes spa, carton, pallet

## SPA INFORMATION

**Overall dimensions, armrests closed, seat upright and forward:**  
59"L (150cm) x 33"W (84cm) x 57"H (145cm)  
**Overall dimensions, armrests open w/ cup holders exposed, seat upright and forward:**  
59"L (150cm) x 46"W (117cm) x 57"H (145cm)  
**Minimum area required for full chair and armrest movement:**  
76"L (193cm) x 46"W (117cm) x 57"H (145cm)  
**Empty weight (complete):** 198lbs (90kg)  
**Water Fill Line Capacity:** 4.5 U.S. gallons  
**Whirlpool pump motor:** **110V:** 1/6 HP, 110V, 60Hz  
**220V:** 1/6 HP, 220V, 50/60Hz  
**Seat upholstery:** Polyurethane  
**Seat and back motors:** 24V DC Linear Actuators. Spa requires 17" (44cm) of space between pedicure spa and wall  
**Brushless Roller Massage motor:** 12V AC, Adapter included (alternate voltages available)  
**Power source:** **110V:** 110V AC, 2.75 Amps, 60 Hz (GFCI Protected)  
**220V:** 220V AC, 2.75 Amps, 50/60 Hz (GFCI Protected)

- ▶ **Caution: Pedicure spa must be installed by a licensed electrician and a licensed plumber, conforming to all local and national electrical codes**

**Construction:** Metal Frame with Acrylic Shells and basin, pre-plumbed  
**Clean Touch™ Pipe-Free® Technology:** 4 water massage channels, no closed loop circulating pipes, fully drained, easy to clean and sanitize.  
**Electrical switches:** On/Off switch for whirlpool pump. A single hand-held, low voltage remote control for massage motors, heat and seat/back position. Hot and Cold water supply lines required.  
**Compliances:** Tested according to CAN/CSA-E60335-1:1994, CAN/CSA-E60335-2-32:2001, UL 60335-1:2002, & UL 1647:2001  
**Electrostatic Limits:** This unit may lose one or more functions when electrostatic contact discharge in excess of 4KV gets into accessible conductive part of the unit and can be restored by resetting the unit.  
This unit may lose one or more functions when power surge in excess of 2KV is applied to the AC input power port and can be restored by resetting the unit.  
This unit may lose one or more functions when subjected to fast transient voltages in excess of 0.5KV at 5 KHz repetition frequency and cannot be restored.  
**Limited warranty:** **One (1) year on parts from date of shipment. Labor is not included.**


---

*NOTE: Due to our policy of continuous improvements, all specifications are subject to change without notice.  
All dimensions and weights are approximate*



EUROPEAN TOUCH™

## REMOTE CONTROL CONFIGURATIONS

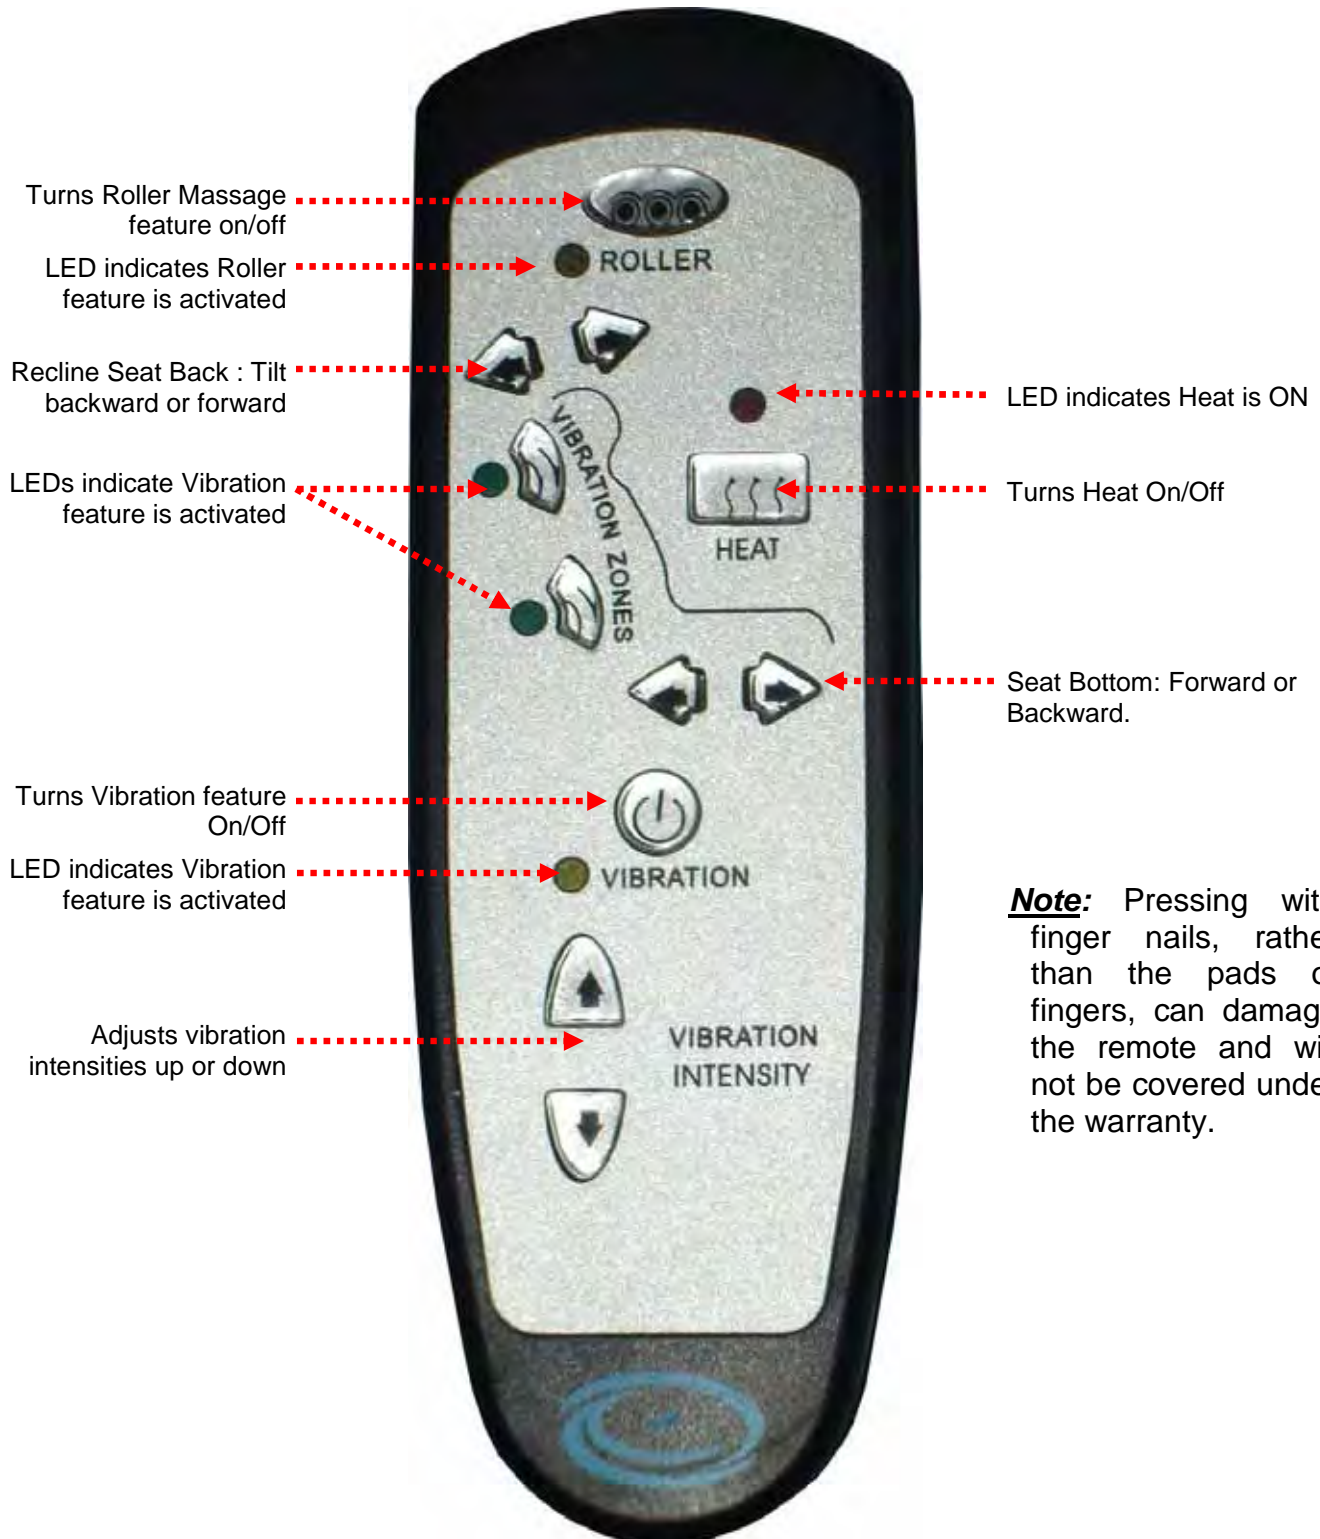



## EUROPEAN TOUCH™

### WIRED SOUND OPTION



1/8" (3.5mm) Phone Jack.  
Plug in Headphones or Portable Speakers.

1/8" (3.5mm) Phone Plug Cable.  
Plug into any MP3 Player or IPOD that  
has a 1/8" (3.5mm) Phone Jack.

Stowe away the end of the phone plug cable in  
the Massage Remote Pocket when not in use.

## COMPONENT REFERENCE



**On/Off Button**



**On/Off & Drain Button  
as with PDP option**

Note: Pressing with finger nails, rather than the pads of fingers, can damage the on/off switch and will not be covered under the warranty.

## PEDICURE PRODUCT GUIDELINES

Because there are so many different products on the market, it is difficult to list all of the pedicure products that are safe to use in our pedicure spas. However, the following guidelines can be used:

- It is your responsibility to understand and follow your state's regulations regarding product cleaning and disinfecting requirements.
- Do not use any products containing a foaming agent; this will cause excessive foam.
- It has been determined that products containing non-dissolving abrasives (such as sand and sea salts) will not harm the internal component structure of your pedicure spa as long as the entire EUROPEAN TOUCH cleaning requirements are followed without deviation.
- Oil based products may be used in your pedicure spa as long as the cleaning requirements are met.
- Please use pedicure products and cleaning solutions in accordance with each manufacturer's directions.

EUROPEAN TOUCH pedicure spas will give you many years of service as long as proper precautions, precise cleaning, and operating instructions are followed. It is the responsibility of the pedicure spa user to properly clean and maintain the pedicure spa.

# CLEAN TOUCH™ PIPE-FREE SPA CLEANING AND DISINFECTING PROCEDURES

**Always check with your state board for required cleaning and disinfecting procedures.**

It is extremely important to clean and disinfect your pedicure spa after each pedicure, after the last pedicure of the day, and once a week for overnight cleaning. Regular cleaning will help keep your pedicure spa in good working condition. Proper and continuous cleaning will kill harmful bacteria and germs that can cause infection. To clean your pedicure spa equipped with Clean Touch technology, follow these easy steps.

## **Procedures for Cleaning and Disinfecting Pipe-Free Pedicure spas**

After use upon each patron, each Pipe-Free Pedicure spa shall be cleaned and disinfected in the following sequential manner:

- (1) All water shall be drained from the spa basin.
- (2) Remove 2 piece inlet housing & impeller.
- (3) Scrub all visible residue from the inlet housing, impeller, inside walls of the basin, and/or other components and the areas behind or under each with a clean brush and liquid soap (labeled as such on soap product) and water. Rinse with clean water.
- (4) Reinsert the properly cleaned inlet housing & impeller,
- (5) Refill the basin with clean water and circulate the correct amount (read the label for mixing instructions) of the EPA-registered hospital-liquid disinfectant which the label claims is a bactericide, fungicide, and virucide, through the basin for at least 10 minutes.
- (6) Drain, rinse and wipe the basin dry with a clean paper towel.
- (7) Record this procedure in the pedicure-cleaning log. The log shall contain the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done after a client.

At the end of every day and after performing the procedures provided in subsection (b) (1 through 6) and after the last client, each pipe-free pedicure spa shall be cleaned and disinfected in the following sequential manner:

- (1) Fill the basin with warm water and detergent (labeled as such on detergent product) and circulate the detergent through the spa system for at least 10 minutes.
- (2) Drain the detergent solution and rinse the basin.
- (3) Refill the basin with clean water and circulate the correct amount (read the label for mixing instructions) of the EPA-registered hospital-liquid disinfectant which the label claims is a bactericide, fungicide, and virucide, through the basin for at least 10 minutes.
- (4) Drain, rinse and wipe the basin dry with a clean paper towel.
- (5) Allow the basin to dry completely.
- (6) Record this procedure in the pedicure-cleaning log. The log shall contain the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done at the end of the day.

At least once each week, after completing the procedures provided in subsection (c) (1 through 3), and the disinfectant solution in each pipe-free pedicure spa shall not be drained and the following sequential procedures shall be followed:

- (1) The unit shall be turned off and the disinfecting solution shall be left in the unit undisturbed for 6 to 10 hours.
- (2) After the disinfectant solution has been sitting between 6 to 10 hours, rinse and wipe the basin dry with a clean paper towel.
- (3) Record this procedure in the pedicure-cleaning log. The log shall contain the date and time of each cleaning, initials of the person who completed the procedure, and shall indicate that the cleaning was done weekly.

The pedicure-cleaning log shall be made available upon request by either a patron or a state board representative.

**A violation of this section may result in an administrative fine and/or disciplinary action.**

**CAUTION:** Cleaning products that contain abrasives can damage the pedicure spa. Use only non-abrasive products to clean your spa.

# HISTORY AND NOTES

## HISTORY AND NOTES



# EUROPEAN TOUCH™

**EUROPEAN TOUCH  
8301 W. Parkland Court  
Milwaukee, WI 53223**

**Phone Number: 1-414-357-7016  
Toll Free: 1-800-626-6912  
Fax: 1-414-357-6360**

**Web Site: [www.europeantouch.com](http://www.europeantouch.com)  
Email: [info@europeantouch.com](mailto:info@europeantouch.com)**